

What to do if... What to do if...



A tire punctures

P. 557/
567

If you have a flat tire



The engine does not start

P. 85

Immobilizer system

P. 568

If the engine will not start

P. 574

If the 12 volt battery is discharged



The shift lever cannot be moved out

P. 569

If the shift lever cannot be shifted from "P"



The engine coolant temperature gauge enters the red zone

P. 578

If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 570

If you lose your keys



The 12 volt battery runs out

P. 574

If the 12 volt battery is discharged



The doors cannot be locked

P. 43

Doors



The horn begins to sound

P. 87

Alarm



The vehicle is stuck in mud or sand

P. 581

If the vehicle becomes stuck



The warning light or indicator light comes on

P. 534

If a warning light turns on or a warning buzzer sounds...



Warning lights



Brake system warning light



P. 534



Malfunction indicator lamp



P. 535



ABS warning light



P. 535



Driver's seat belt reminder light

P. 536



Front passenger's seat belt reminder light

P. 537



ECB* warning light

P. 535



Tire pressure warning light

P. 537



Low fuel level warning light

P. 536



Electric power steering warning light

P. 535



SRS warning light

P. 535



Pre-collision system warning light

P. 535



Open door warning light

P. 536



Slip indicator

P. 536



Charging system warning light

P. 534



Master warning light

P. 537

*: Electronically Controlled Brake System

What to do if...



The warning message is displayed

P. 544

If a warning message is displayed

What to do if...

